





2002 "Zero" Setup Sheet



1 13/16" Spacer (Setup Kit)

3/4" Square Tube (Setup Kit)

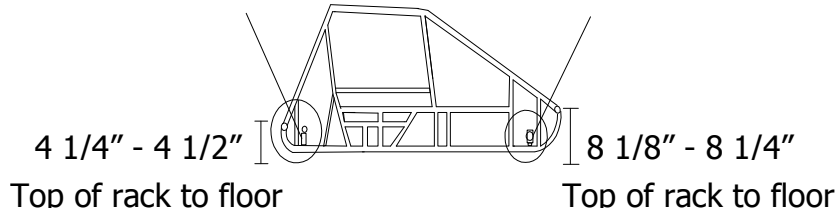

Panhard Bar in 1st hole

SWB Axle 7 3/4—7 7/8

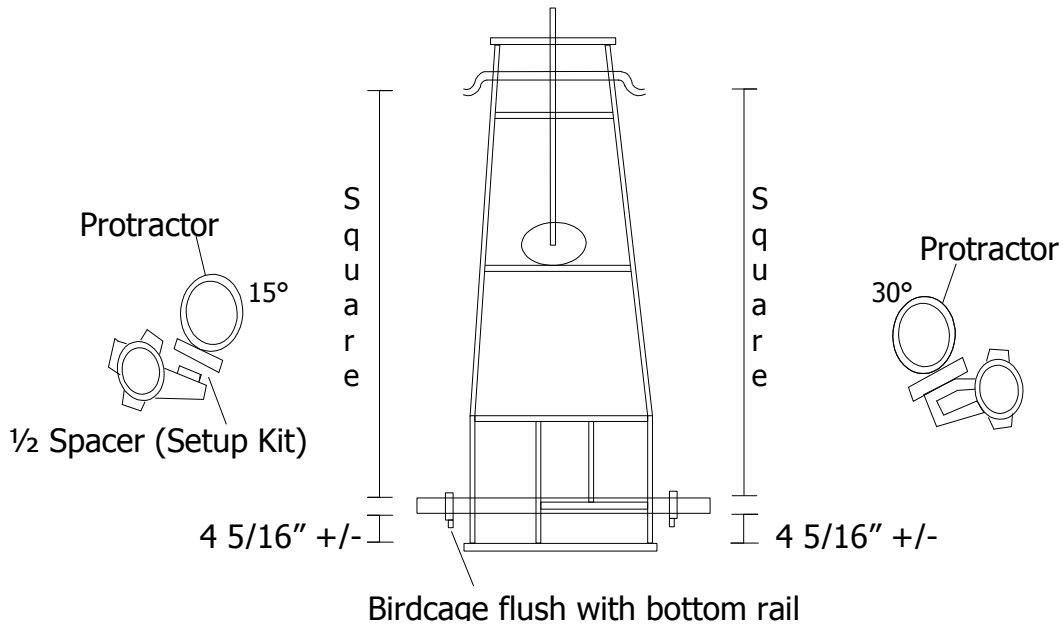

Panhard Bar in 1st hole