





1998-2005 BOB "Zero" Setup Sheet



1 13/16" Spacer (Setup Kit)

3/4" Square Tube (Setup Kit)

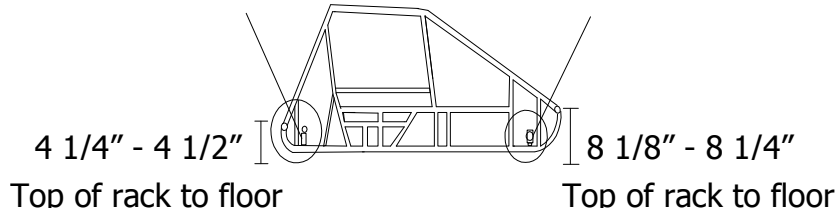

Panhard Bar in bottom hole

SWB Axle 7 3/4—7 7/8

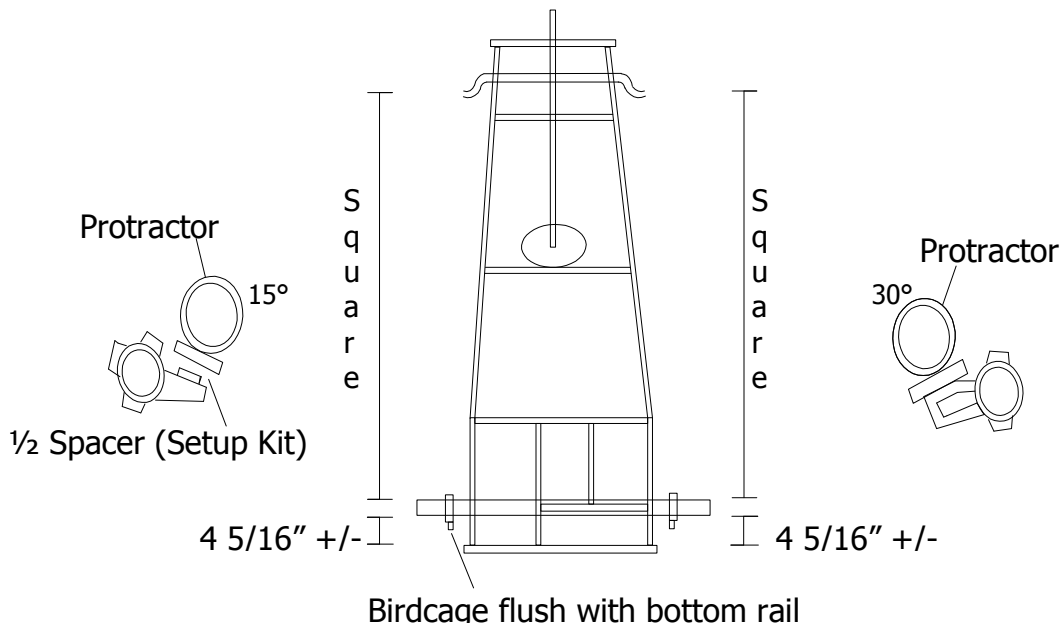

Panhard Bar in 2nd hole from bottom